

ENGLISH

VIDEO DOOR PHONE SYSTEM

USER MANUAL

Manual covers IH-6912 Master and IH-6912 Slave Monitors

PRECAUTIONS BEFORE INSTALLATION

Connect this unit ONLY to other compatible units. Do not connect it to any other type of alarm or auxiliary device. Connecting anything else to this unit may damage it or prevent it from operating properly, and will invalidate the warranty.

Do not place cables from the AC/DC adapters, camera or monitor where they can be damaged or stepped on. Protect the cables by keeping them out of the way of children, pets and routine household traffic. Do not place heavy objects on power cables; do not cover them with rugs or carpet.

Unplug the AC/DC adapters from the wall outlet when the system is not in use for a long time.

Slots or openings in the back of the monitor, are provided for ventilation and to ensure reliable operation of the video monitor or equipment and to protect it from overheating. These openings must not be blocked or covered. The monitor should never be placed near or over a radiator and should not be placed in a built-in installation or enclosure unless proper ventilation is provided.

All parts should be protected from violent vibration. Impact shocks and dropping may damage the product and should be avoided.


Installation of doorbell camera facing into direct sunlight may affect quality of the video.

CONTENT

1. Parts and Functions -----	1
2. Mounting and Installation-----	1
3. Standard System Wiring-----	2
4. Extending Monitors/Audio Phones-----	3
5. Extending 2 Outdoor Stations-----	4
6. Operation Instructions-----	5
7. Precautions-----	11
8. Specifications-----	11



The model you purchased may not have all the functions mentioned here, but the operations are similar.

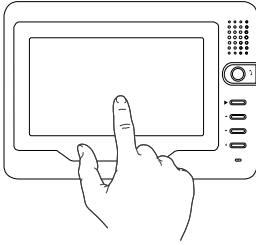


Touch Screen Operation

All the operations and settings can be done by touching the LCD screen.




Full Screen Digital Clock

The date and time will displayed when touch anywhere of the screen, and it will closed automatically after 3 minutes.

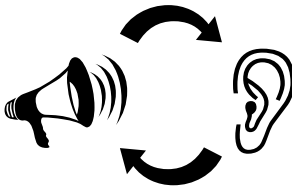


Press-To-Talk Function

A special 'listening' mode which suppresses external background noise..

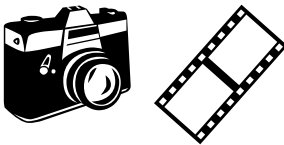

AUTO Picture Memory(optional)


When the house owner is out, the monitor can take pictures of visitors who called your door/bell; you can check pictures with date and time later on.

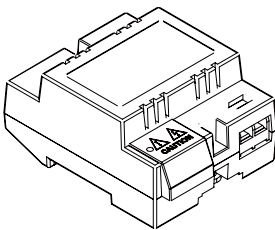



RLC Control Unit(not included)

To connect second electric lock or light.

1. Parts and Functions



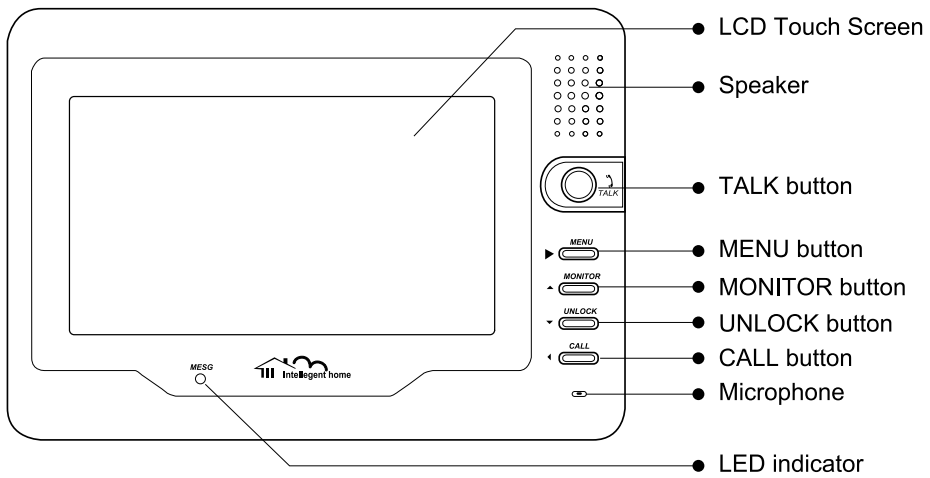


2. Mounting and Installation

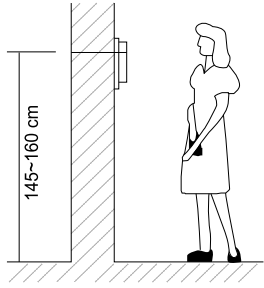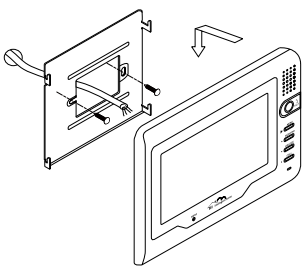


Use the screws to fix the Mounting Bracket on the wall. Screws and brackets are included with the product for this purpose

4. Extending Monitors or Audio Phones

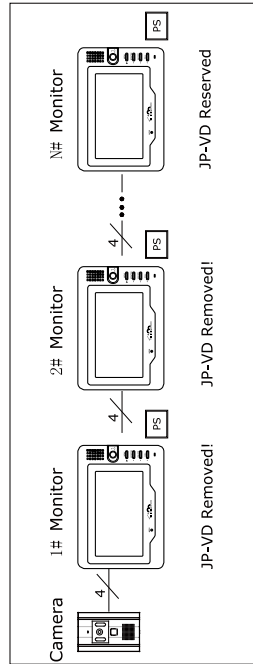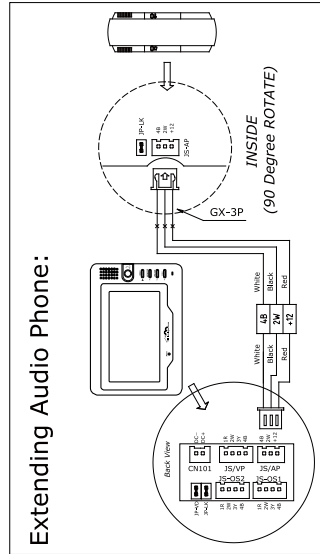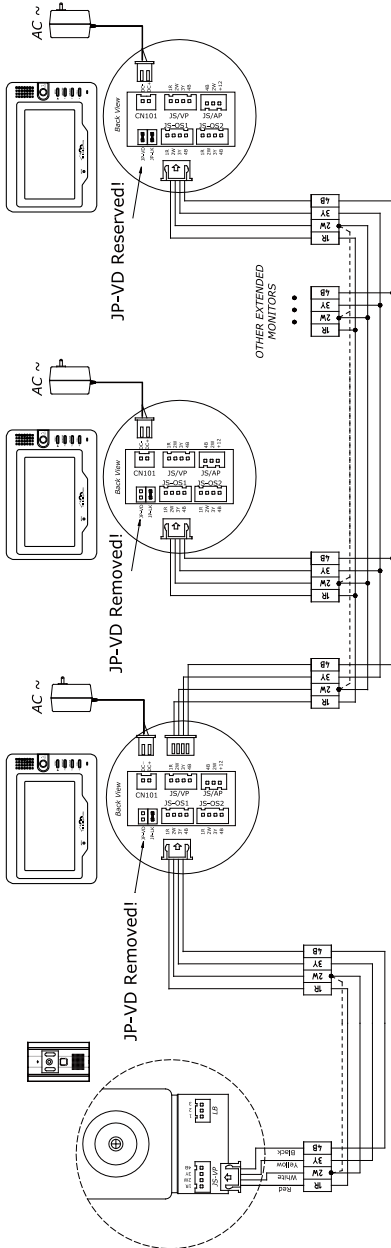


5. Extending 2 Outdoor Stations

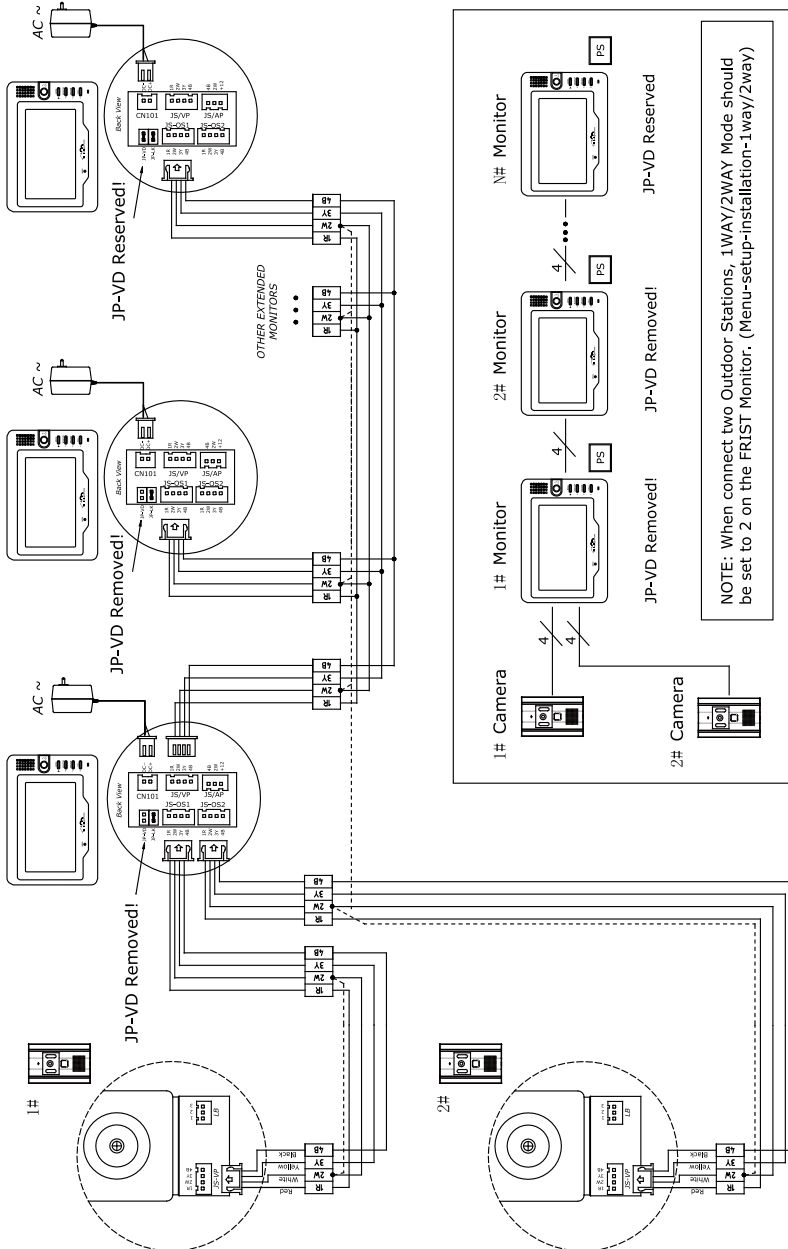

6. Operation Instructions



6.1 Basic Functions

When a visitor presses the Call button on the doorbell/camera unit, the monitor will ring and display the visitor's image; also the IN-USE LED will turn red.

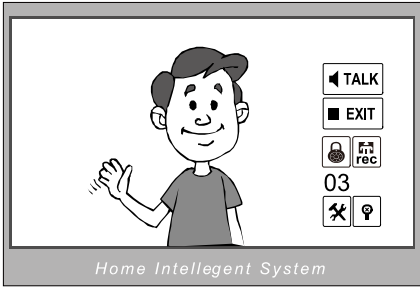

To answer the doorbell, press the TALK/MON button (or touch '🔊' icon on the screen). You can talk with the visitor for 90 seconds before the screen will automatically shut off. To end the conversation yourself, press TALK/MON Button (or touch '🔊' icon) again. If nobody responds to the visitor, the monitor will turn off automatically after 30 seconds..

Press-To-Talk: The monitor has a special 'listening' mode which suppresses external background noise and makes it easier for you to hear the person at the door. When the normal talk is started, press the 'Press ⇨ to talk' icon to enter Press-To-Talk state, and you will in Listening state by default, press '🔊'/'👂' icon to toggle between Speaking state and Listening state. Press '⇐ Auto Talk' icon to exit Press-To-Talk state and return to normal talking state.

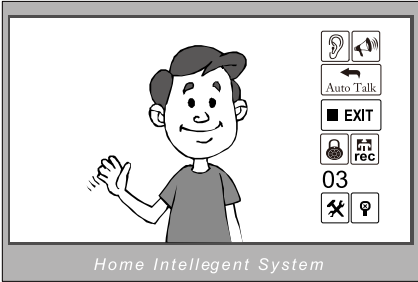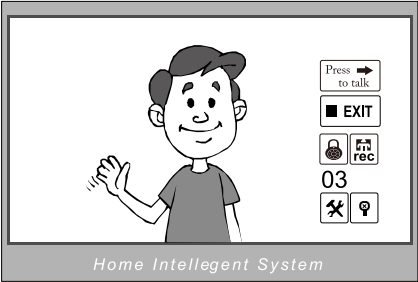

When Monitor is standby, press TALK Button(or touch anywhere on the screen,

then touch '👁️ monitor' icon), the screen will display the view from the doorbell (Outdoor Station). During monitoring state, press TALK Button(or touch '🗨️' icon), to talk to someone outside. Press again to exit. The monitoring state is limited to 30 seconds and will shut off automatically.

When you wish to open the door lock, press UNLOCK button (or touch '🔓 unlock' icon) to release the Electronic Lock.

To get the system to record pictures automatically from the doorbell when people come to the door, press MENU, press SETUP and press AUTO-RECORD on. It will record up to 120 pictures of people at the door even if you are not there to answer.

Press the RECORD Button (or touch '📷' icon) to manually record the current picture.

Touch the '👁️' icon to hide the icons; to re-show the icons, touch anywhere on the screen again.


6.2 Operation for Multi Outdoor Stations(if required)

- If two doorbell cameras are required, the One/Two Camera option should be enabled. To do this, touch '⚙️ setup' icon to enter SETUP. Now press ADVANCED SET (tings) submenu. Enter the password (2008), and change the mode to 1/2 CAMERA.
- Two doorbell cameras can be connected to the monitor directly. The second outdoor station can be a doorbell or a CCTV camera. For the system to function correctly, you must have at least one doorbell. If there is only one Outdoor station to be installed, the Outdoor station must be connected to the CAM1 Port. The second must be connected to the CAM2 Port.
- When monitoring multiple doorbells/CCTV cameras (outdoor stations), switch between them by pressing TALK. Each time you press TALK it will take you to the next outdoor station.

Please Note: If two doorbells connected, and each doorbell is connected to an electric lock, when you operate EITHER of the UNLOCK buttons on EITHER monitor, it will unlock BOTH locks. If you don't wish for this to happen, you can purchase and install an RLC controller and operate them separately.

6.3 Intercom function(available when Multi Monitors installed)


- Intercom can be initiated by either Monitor. Press the INTERCOM button, the other Monitor will ring. Press TALK button on the other Monitor to answer.

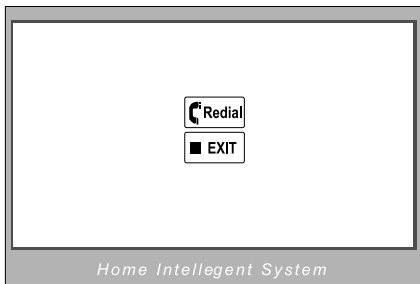

- To end the intercom conversation, press TALK. If no one answers, it will exit automatically after 30 seconds.
- The doorbell function will always override the intercom function.

6.4 Image and Volume adjustments

- During monitoring or talking, press the MENU button (or touch the ⌘ icon), and the screen adjustment menu will be displayed.


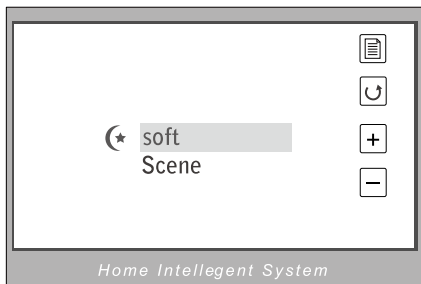


- Press ▲/▼ Button (or Touch the '+'/'-' icon)to increase or decrease current value; Press the MENU Button(or touch the '☰' icon)to switch to the next adjustment item.
- The first item is Scene mode selection: Total 4 Scene modes can be selected in sequence: Normal, User, Soft and Bright. Whenever you modify Brightness or Color, Scene item will be set to User mode automatically.
- Ratio can be shifted from 16:9 to 4:3.


- The Brightness and Color item is for the image quality setting, adjust the value to get the best image you like.
- The Ring Volume and Talk Volume items are for ring tone and talking volume adjust.
- Note that all the modifications will be done immediately after the operation. Press the CALL Button(or touch the '☎' icon) to exit out the setting.

6.5 Basic Setup Instructions



- Touch anywhere on the screen and the date/time page will be displayed. The first line shows the current time, the second line shows the current date and weekday. The date/time page will close in 3 minutes if no buttons are pressed.

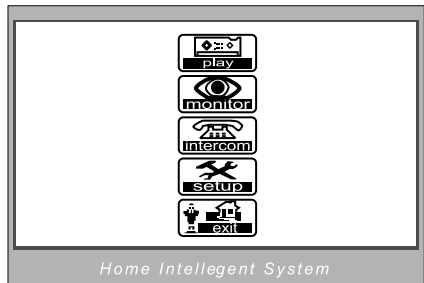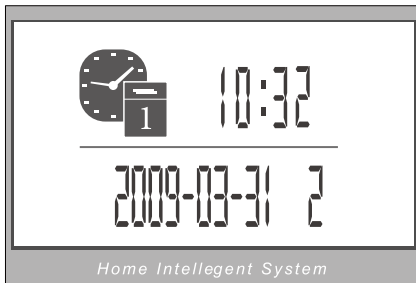


- **Entering the main Menu.** Touch the screen again(or press MENU Button) to enter the Main Menu, press '⌘setup' icon to enter Setup Menu.
- **Going into Setup** To enter setup, press the ▲/▼ Button to change options on the menu, and move the highlighted option to SETUP. You will see the following:

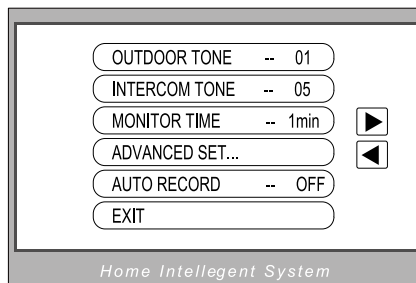

- **'Outdoor Tone'** and **'Intercom Tone'** are for choosing the doorbell melody and the intercom melody.
- **'Monitor Time'**: To change the amount of time the monitor will remain active if no buttons are pressed, use the ▲/▼ Buttons to set between 30 seconds and 10 minutes.
- **'Advanced Set'**: To access the Advanced Settings, a password will be required before entering. The default password is **2008**.

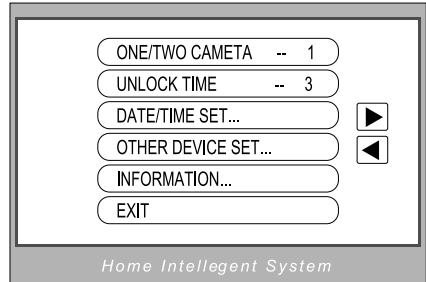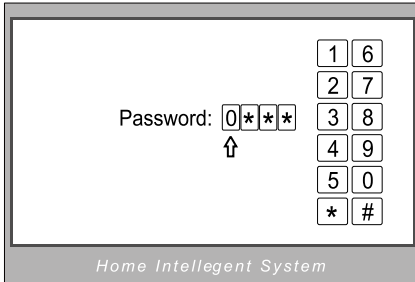



- **The One/Two Camera** can be set to 2 if two outdoor stations are to be installed.
- **Unlock Time**: can be adjusted according to different locks.
- **DATE/TIME Set**: to amend the time and date, access this option. Use MENU button to move the cursor, and the ▲/▼ Buttons to change the date/time. Touch the **'#'** icon (on the number key pad) to save and exit or touch the **'*'** icon to cancel.

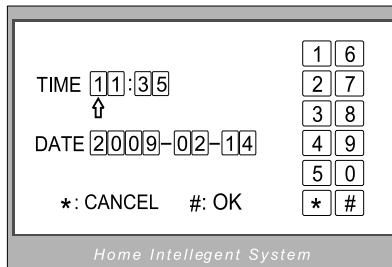

- **'Other Device Set'** submenu: RLC and Remote settings.
- **'Information'** submenu: shows the hardware/software version and voltage info. Press **'Restore to Default'** if you wish to restore all the settings to factory defaults.

6.6 Image Recorder Operation (master only)

- Pictures can be recorded both manually and automatically. Image capacity is about 128 pictures. When the memory is full, the oldest picture will be replaced.
- **Manually taking pictures:** If you wish to take a picture, you can do so by pressing MONITOR, then pressing the REC '📷' icon. (or press the CALL Button)
- **Automatic recording:** (see instructions above to enable this option)
- **Viewing pictures:** To view the pictures on your monitor, touch the screen to enter the main menu, then touch '📺play' icon to enter the playback page. The latest pictures will be shown. To move through the pictures, press either the PLAY button (or touch the '📺play' icon). To delete a picture, touch the '🗑️DELE?' icon. A 'DELETE?' hint will show on the upper right of the screen. Touch the 'DELETE?' icon again to delete the current picture. Please note that deleted pictures cannot be restored.

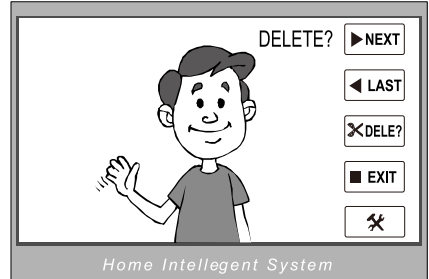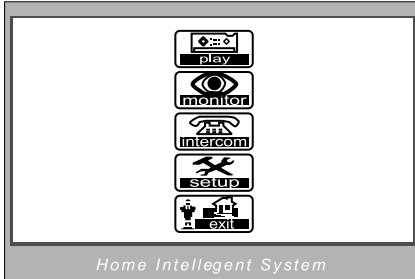

7. Precautions

1. All parts should be protected from violent vibration, forceful impacts and being dropped onto hard surfaces.
2. Do NOT clean the Lens or Screen using your hands or a wet cloth. Do not use organic or chemical cleaners.
3. Clean using a soft cotton cloth. If necessary, lightly dampen the cloth to remove stubborn dirt.
4. Image distortion may occur if the video door phone is mounted too close to a strong magnetic field - loudspeakers, industrial magnets etc.
5. Please keep the video door monitor shielded from excessive water, high temperatures, heavy dust, and highly caustic substances in order to avoid damage.

8. Specifications

Power supply for indoor monitor:	DC 15~18V (supplied by Adaptor)
Power supply for Door Station:	DC 10~12V (Supplied by Indoor Monitor)
Audio Phone :	DC 10~12V (Supplied by Indoor Monitor)
Power consumption:	Standby 0.5W; Working status 15W (for kits)
Monitor screen:	7 Inch color TFT-LCD
Display Resolutions:	1,440(R, G, B) x 234 pixels
Video signal:	1Vp-p, 75Ω, CCIR standard
Picture Memo Capacity:	127 PCS
Wiring:	4 wires, polar
Monitor time:	30 seconds
Talking time:	90 seconds
Dimensions:	160(H)×223(W)×25(D)mm

WARRANTY CARD

NB Please keep this document safe, as it is proof of your Warranty
Your Video door system comes with a one year Manufacturers Warranty. When used normally, the following services are offered:

1. Replacement for malfunctioning parts in first three months
2. Repair free of charge for malfunctioning parts in first year

The following actions will void the Warranty:

1. Damage to the device during installation
2. Damage to the device through misuse
3. Opening and/or disassembling the device
4. Attempting to force the device to perform functions for which it is not intended
5. Attaching the device to power supplies other than those recommended by the manufacturer

Distributor for Warranty purposes:

Lale Trading Ltd

34a High Street

Hornsey

London

N8 7NX

+44 (0)20 83482040

www.intelligenthomeonline.com

Product: _____

Purchaser Name: _____

Invoice N: _____

Purchase Date _____

The design and specifications can be changed without notice to the user.
Right to interpret and copyright of this manual are preserved.